

Frequently asked questions

Why wash the bottom of your mower?

During mowing, grass and soil get stuck on the carter and blades of your mower.

Gradually, this dirt interferes with the balance of the blades' rotation and the acidity of the grass attacks the body and causes rust.

It is recommended to get rid of these residues after each mowing to extend the life of your mower.

Is the Mower Cleaner water efficient?

Of course, thanks to the rotation of the blades the water sent by the Mower Cleaner is powerfully propelled all over the lower parts of the mower. The use of the Mower Cleaner requires much less water than cleaning with a simple garden hose and avoids the inconvenience of cleaning with a high-pressure system.

How long should you keep the Mower Cleaner running for your mower to be clean?

It depends on your mower's condition and its dirt accumulation.

It only takes a few minutes to clean a new or slightly dirty mower.

If your mower has never been washed or is heavily fouled, the Mower Cleaner should be run a little longer. The Mower Cleaner is not an aggressive system, all dirt may not be removed at the first wash; it is only thanks to a regular use, mowing after mowing that your mower will become clean again.

Can the Mower Cleaner be used for electric mowers?

Of course. In general, all electrical circuits of these mowers are well protected by a plastic casing.

However, on older or worn out models, make sure these protections are not damaged under your mower (no bare cables) before using the MC.

Can it be used for all mower diameters?

Yes! Thanks to its graduated handle, you can easily position the Mower Cleaner according to the diameter of your mower. Larger mowers are no problem, as the blades eject the water in power over all parts of the mower, even in remote corners. For an optimal result, it should be run a little longer.

Can it be used on double or triple-bladed tractors?

Of course, but to do this you have to use it for each blade in several stages.

Warning: Make sure to stop your mower before sliding the Mower Cleaner under the next blade.

Why propose a ground attachment?

The attachment to the ground helps to maintain the Mower Cleaner during its use. It strengthens safety by preventing the product from moving or being pulled from the outside (for example if someone walks on the garden hose!)
